










Editing Tracks

1. Power on the Reflex and using the down arrow  scroll to "Audio" and press 
2. It will prompt you to "mix audio tracks" to a disc. Make your selection by using the arrows keys and pressing 
3. Insert your disc(s). Once the Reflex has prepared the disc it will show your total tracks and minutes on the blank disc or HD when starting this should appear as Total : 0 Trk 0m:00S. The bottom half of the screen will show the tracks of the master disc. Use the arrows to scroll through and use the  button to select a track
4. Once a track had been selected it will be annotated with an *
5. Once you have selected all the tracks from one disc scroll to the end of the track list. The Reflex will ask, "Are you done?" Push  for yes, it will then copy those selected tracks.
6. Once the first disc had finished copying the Reflex will ask to "Finish Editing?"
 - a. If you are done press  it will prompt you to "Confirm to Finalize?" Press  . The reflex will now finalize your disc.
 - b. If you would like to insert another master disc to add additional tracks push the down arrow  to "Insert Next Master?" and push  and repeat the above steps beginning with 3.