

QUICK START GUIDE

Disc Makers Reflex1 CD/DVD Duplicator



This Quick Start Guide has the basic instructions for duplicating DVDs disc-to-disc, which is copying directly from a Master DVD placed in the top drive. The process for duplicating CD-Rs is the same. For more detailed instructions on the Reflex tower's operation, please refer to the User Guide on the attached CD.

Basic Operation

- 1 Plug in and power on the Reflex by pressing the round button at the bottom right on the front of the unit. The system will initialize and perform a self-test, which will be displayed on the LCD screen. When the self-test is complete, the image below will appear on the LCD screen:

```
Disc Makers  
1. Copy
```

- 2 Open the drive trays by pressing the eject buttons on the drives' faces. Place the Master disc in the top drive and the blank disc in the bottom drive. Press the **ENT** button on the display face.

The Reflex will automatically detect the blank media and prepare the Master for duplication.

- 3 The controller will display the message below as it begins duplicating:

```
Copying... 4464Mbyte  
DVD-R 288 5%
```

- 4 When the duplication process is complete, the Reflex will eject the successfully copied disc and the LCD will display:

 
```
Pass 1 Fail 0  
Waiting for Blanks
```

You can now load another blank disc to continue duplicating. Repeat as necessary.

Use of the USB connect feature

- 1 Make sure your Reflex duplicator and PC are powered **OFF**.

- 2 Located at the rear of the Reflex duplicator, you will find the USB connection. Connect the appropriate end of the supplied USB cable to the back of the Reflex, and the other end to an open USB port on your computer. Slide the USB connection switch towards the USB port (the switch is located next to the USB port on the back of the Reflex duplicator) This will enable the USB connection. Turn on the Reflex unit, the red LED will illuminate.

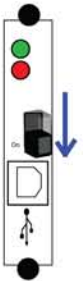

- 3 Power on your PC. Windows will display **Found New Device**. The Reflex will appear as a **USB Mass Storage Device**. Follow any on-screen instructions for setting up a USB device. In Windows Explorer & My Computer, the bottom writer drive will appear as a Compact Disc Drive icon with a new drive letter such as E:\. The drive is now ready to read and write to, using the provided software or other authoring software. (Please reference your software help section for its use.)

- 4 To go back into Duplication Mode, turn off the Reflex only and push the USB switch **Up** (away from the USB connector). Turn the Reflex back on and use the Reflex to copy as a stand-alone duplicating machine.