


Delete a partition from the HD

Power on the Reflex and using the down arrow  scroll to Image, press .

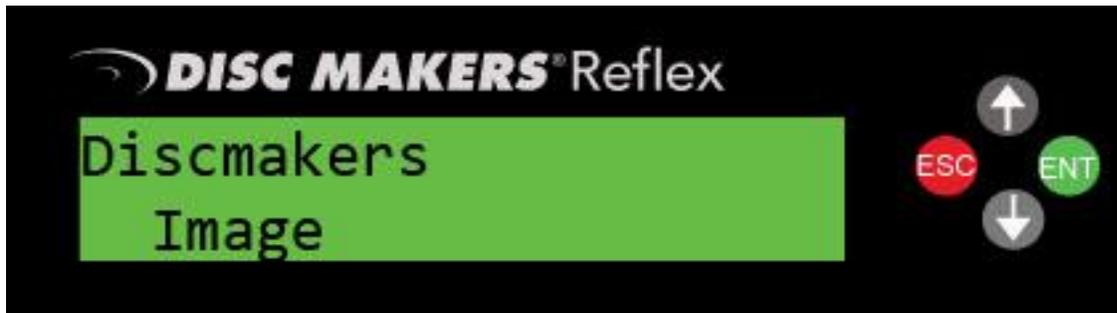

Scroll down to Image 4.Delete Partition and push .



Scroll through the partitions that you currently have on the machine using the  when you locate the partition you wish to delete press .





Verify this is the correct partion name and press  .