DISC MAKERS "How to" guides

How to change M-Code Consistency

- 1. Press and hold the for 5 seconds
- 2. Immediately press and hold the FNT for 5 seconds
- 3. This will bring you into Adv. Setup.
- 4. Scroll down to M-Code Consistency press
- 5. Scroll down to Off
- 6. Press ENT
- 7. Press ESC 2 times