## DISC MAKERS "How to" guides

## Change Burn speed Auto/Forte

- 1. Power on the Reflex
- 2. Scroll to Select Burn Speed and press .
- 3. Scroll to type of speed you would like to change and press.
- 4. Scroll to speed you would like to change and press

  The machine will now return to the Select Burn Speed screen and you can make further changes if needed