## DISC MAKERS "How to" guides

## Load Default for Auto/Forte

- 1. Power on the Reflex
- 2. Scroll to System Utilities and press .
- 3. Scroll to Load Default and press .
- 4. Machine will display "Load Default press enter to continue" press

The machine will now return to the Setup-Load Default screen and the machine has been returned to factory settings.