

## Reflex M<sup>3</sup> Media Center



### 1. Turning the unit on

Turn the Reflex M<sup>3</sup> Media Center on by pressing in the chrome power switch located on the bottom right front corner of the unit.

### 2. How to backup large capacity data to a CD/DVD (Disc Spanning)

When backing up a memory card that has more content than will fit on a disc, the unit will automatically calculate how many discs you will need to backup the data. This process is called disc spanning. For example, if you have a SD card with over 2GB of data and you want to copy it to a disc, place a standard CD-R into the burner and the unit will automatically calculate that you need 4 CDs to backup this SD card. However, if you place a standard DVD-R (4.7G) into the drive to copy, it will start copying without requiring additional discs.

- Insert your memory source (SD Card, USB Drive, etc) and place a blank CD or DVD disc into the top drive.
- Select "1. Copy" and press "OK". Scroll through the options and choose the appropriate selection. "USB to Disc" if you are backing up a USB Drive or "Mcard to Disc" if using any memory card slots.

- When finished copying the disc tray will be ejected. If more than one disc is required the display will ask you insert a new disc.
- Close the tray and the system will automatically begin recording to the new disc. Continue this process until all of the data from your source has been copied.

**Note:** The Reflex M<sup>3</sup> Media Center has a built-in sleep function. If left idle for 5 minutes or more, the system will automatically go into sleep mode. Press any of the buttons next to the display to resume operation.


### 3. How to backup multiple data sources to a single CD/DVD (Multi-session)

When you want to combine data from multiple memory cards or USB drive onto one disc, the Reflex will automatically add data from multiple sources to one disc. Only one source can be inserted into the Reflex at any given time. For example, if you insert a SD card and copy it's content you can then remove the card after completion then place a USB Drive in the Reflex and copy that content to the disc if the content fits in the remaining free space. You can continue copying content from any source to the remaining free space on the disc.


**Note:** Before you can backup data from multiple sources to all three drives at once, you must change the setting on your unit. On the main menu, scroll down to "5. Setup" and press OK. Scroll down to "4. Burn MultiDisc" and change the setting to "Yes" and press OK. You are now set up to burn multiple discs containing the same content from your memory source. Press the red return button to return to the main menu"

- Insert your memory source and place a CD or DVD into the top drive

*Continued on other side*

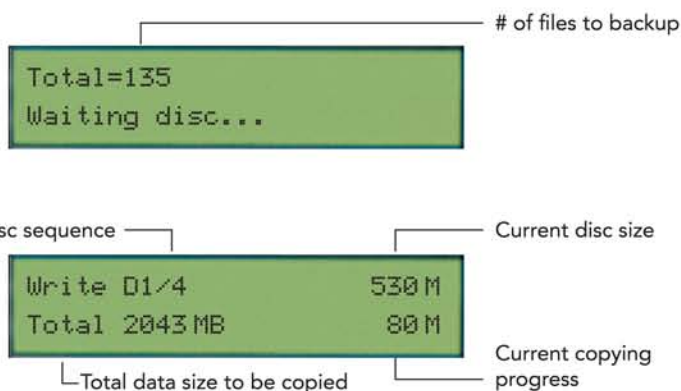

- B. Select "1. Copy" and press "OK".  
Scroll through the options and choose the appropriate selection whether you are copying from a USB Drive or Memory card.

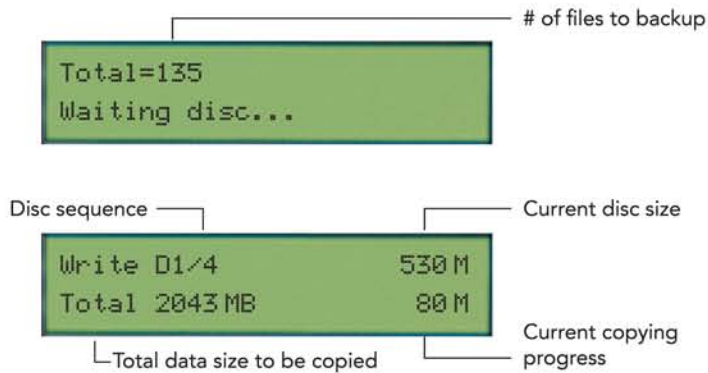

- C. When finished, the disc tray will eject.  
You can continue to copy more memory cards and/or USB drives if the disc has capacity remaining. You can also remove the disc and begin copying to a new disc.

#### 4. How to do Disc to Disc (CD/DVD to CD/DVD) copying

The Reflex M<sup>3</sup> Media Center also supports disc to disc copying.

1. Place your source disc in the top drive and blank disc(s) into the drives below.
2. Select 1. Copy > Select 3. Disc to Disc copy > Press OK to start copying
3. When your discs are finished copying, the drives will eject it.

